




## Assembly ZAK®-System:

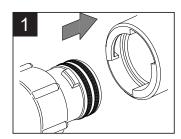


end and slide the ZAK® spi- as it will go. got end into the ZAK® socket as far as it will go.

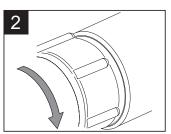

Apply approved lubricant Turn the ZAK® connection Pull back ZAK® connection to the O-rings of the spigot fitting 90° clockwise as far fitting approx. 4 mm as far

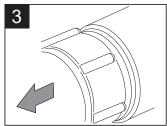


as it will go.

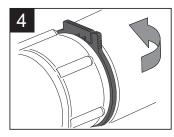


Slide the fixing ring into the gap and engage the interlocking by pressing it together. (The fixing ring can be pulled on so far that it can also be inserted later)


## Dismantling ZAK®-System

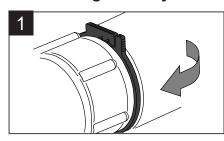

Open the interlocking of the fixing ring. Expand the fixing ring and pull it back.

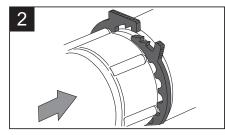

Insert ZAK® connection fitting as far as it will go.

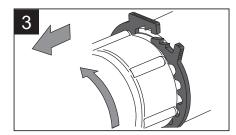

Turn the ZAK® connection fitting 90° counter-clockwise as far as it will go and pull it out of the ZAK® connection sleeve. After dismantling, check Orings and replace if necessary.

## If you have any other questions or if you need more information please contact:

Hawle Armaturen GmbH - Application Engineering -Liegnitzer Str. 6 83395 Freilassing

Phone: +49 (0)8654 6303-0 Telefax: +49 (0)8654 6303-222

E-Mail: info@hawle.de Web: www.hawle.de