Operating and maintenance instructions for Dismantling tool for BAIO® Seals Ord. No. 529 999 0000



1. Intended use

The dismantling tool is to be used exclusively as a tool for dismantling seals made of BAIO® sockets.

CAUTION: Any other use is excluded!

In addition to the operating instructions, the accident prevention regulations and the regulations of the employers' liability insurance associations must be observed during use.

2. Product description

Made of round steel with Hawle epoxy powder coating, the dismantling tool is used to remove BAIO® sockets from seals installed on site with a minimum of effort. After the dismantling you can install another seal by hand.

Example: Replacement of a BAIO® lip seal (for cast iron pipes according to DIN EN 545) for a GKS seal for plastic pipes.



Dismantling tool

3. Dismantling



Hook the dismantling hook completely behind the seal.



Lift the seal out of the sealing seat with the dismantling tool hooked in.

CAUTION: Damaged tools can cause damage to the coating or seals during removal!

4. Assembly

Make sure to check the sealing seat before inserting the gasket. The insertion groove for the seal needs be evenly coated and clean.



Squeeze the seal heart-shaped.



Insert the seal into the BAIO® socket.

5. Maintenance

The dismantling tool is protected against corrosion with a Hawle epoxy powder coating.

If the coating is damaged, the damaged area must be permanently protected against corrosion with suitable 2-component repair material.

Should you have questions or need further information, please contact:

Hawle Armaturen GmbH
- Application Engineering Liegnitzer Str. 6
83395 Freilassing

Phone: +49 8654 6303-0

Fax: +49 8654 6303-222 Email: info@hawle.de Web: www.hawle.de