

Operating Instructions for Pipe Cutter for PE/PE-X Pipes, Ord. No. 607-00



1. Intended use / Product description

The pipe cutter is the perfect tool for cutting of PE pipes.

Due to the favourable lever transmission, very little force is required to achieve a smooth and rectangular cut.

Type: PE/PE-X pipes with outside diameter up to d 40 mm Ord. No. 607 040 0000

 d 50 to d 63 mm Ord. No. 607 063 0000

When using the device, the applicable standards and regulations, accident prevention regulations, as well as the trade associations' provisions shall be observed and complied with in addition to the Operating Instructions.

Only skilled personnel should use the device.

2. Operation



1. Cut the pipe by applying regular and firm pressure to achieve a clean and straight cut.
2. Several lifting movements are required for cutting
Make sure that the strap successively engages into the toothed rack - tooth by tooth.
3. If the pipe cutter does not close completely, check the tension of the spring at the blade bearing.
4. To ensure proper functioning, the movable parts have to be lubricated at regular intervals.

IMPORTANT: Do not reach into the knife during the cutting process - danger of injury!

If you have any other questions or if you need more information please contact:

Hawle Armaturen GmbH, Application Engineering
Liegnitzer Str. 6, 83395 Freilassing, Tel.: +49 8654 6303-0, Fax: +49 8654 6303-222, info@hawle.de