

1. Intended use / Product description

The seepage hose for Hawle air valve set for potable water is used to absorb and slowly drain off the splash water that occurs inside the Hawle air valve set (occurs during the deaeration process) and the residual water that occurs when the valve is removed. In addition, possible root growth is prevented.

The seepage hose consists of a flexible drainage pipe d 50 mm covered with filter fleece. The collected splash water / residual water is evenly discharged over the large surface.

Penetration of fine-grained soil material via the seepage hose into the interior of the aeration and ventilation set is reduced by the filter fleece.

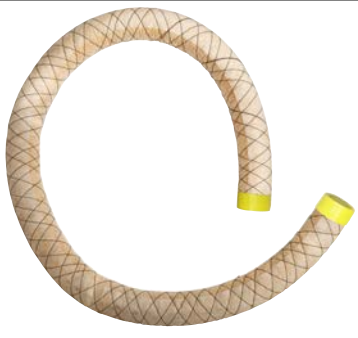


Use with:

- „fine-grained“ soils
- Installation situations in which slurry is expected to enter the casing (groundwater).

During laying, installation and maintenance operations, the applicable standards and guidelines, accident prevention regulations and the regulations of professional associations are to be observed and complied with.

Laying, installation and maintenance operations may be performed by qualified personnel only.

3. Assembly

		
<p>Figure seepage hose</p>	<p>1. Mount the supplied PE pipe d20 in the drain fitting.</p> <p>2. push seepage hose with open end (perforated pipe protection cap) onto the pre-assembled PE pipe for at least 20cm.</p>	<p>Before backfilling, the seepage hose must be covered over the entire length of the pipe with material capable of seeping (grain size > 5 mm).</p>

4. Maintenance

The seepage hose is maintenance-free.

5. Commissioning and pressure testing

When backfilling the excavation, make sure that the seepage hose is not damaged or pulled off the PE pipe d 20.

If you have any other questions or if you need more information please contact:

Hawle Armaturen GmbH
 - Application Engineering -
 Liegnitzer Str. 6
 83395 Freilassing
 Phone: +49 (0)8654 6303-0
 Telefax: +49 (0)8654 6303-222
 E-Mail: info@hawle.de
 Web: www.hawle.de