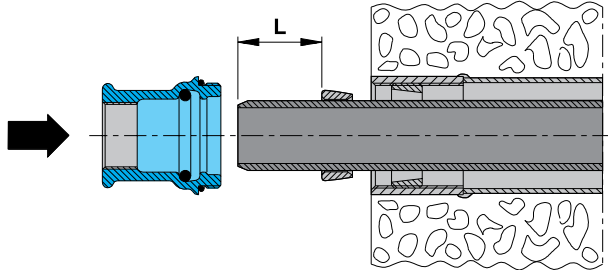
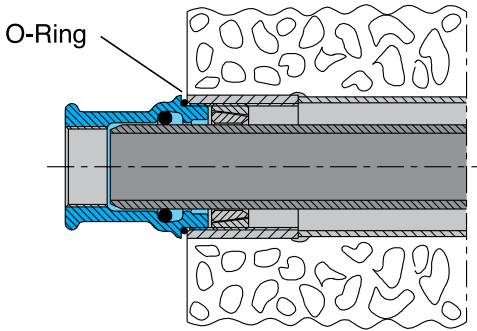
	1. After fixing protective conduit in masonry walls. Pull the medium pipe in, then cut straight and chamfer.										
	2. Slide the grip ring on while observing the insertion length (L) of the pipe end. <table border="1" data-bbox="879 958 1490 1182"> <thead> <tr> <th>Pipe diameter</th><th>Insertion length L</th></tr> </thead> <tbody> <tr> <td>32</td><td>55 mm</td></tr> <tr> <td>40</td><td>60 mm</td></tr> <tr> <td>50</td><td>62 mm</td></tr> <tr> <td>63</td><td>65 mm</td></tr> </tbody> </table>	Pipe diameter	Insertion length L	32	55 mm	40	60 mm	50	62 mm	63	65 mm
Pipe diameter	Insertion length L										
32	55 mm										
40	60 mm										
50	62 mm										
63	65 mm										
	3. Assemble the fitting without sealant! (The o-ring between the steel pipe and fitting saves on packing)										

Should you have questions or need further information, please contact:

Hawle Armaturen GmbH
- Application Engineering -
Liegnitzer Str. 6
83395 Freilassing
Telephone: +49 8654 6303-0
Fax: +49 8654 6303-222
Email: anwendungstechnik@hawle.de
Website: www.hawle.de