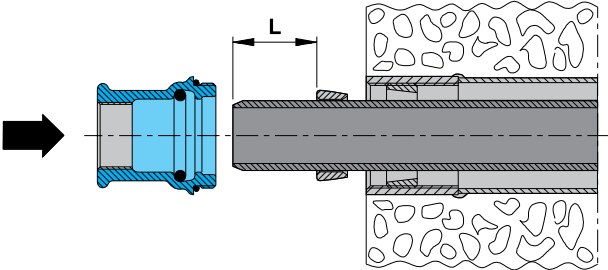
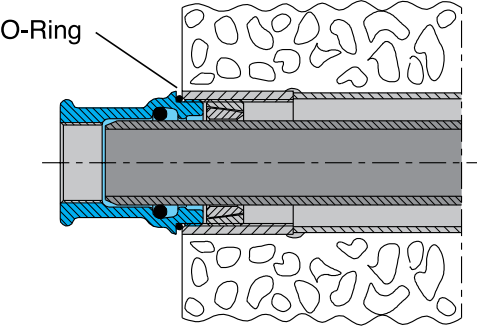
	<p>1. After fixing protective conduit in masonry walls. Pull the medium pipe in, then cut straight and chamfer.</p>										
	<p>2. Slide the grip ring on while observing the insertion length (L) of the pipe end.</p> <table border="1" data-bbox="879 958 1490 1182"> <thead> <tr> <th>Pipe diameter</th> <th>Insertion length L</th> </tr> </thead> <tbody> <tr> <td>32</td> <td>55 mm</td> </tr> <tr> <td>40</td> <td>60 mm</td> </tr> <tr> <td>50</td> <td>62 mm</td> </tr> <tr> <td>63</td> <td>65 mm</td> </tr> </tbody> </table>	Pipe diameter	Insertion length L	32	55 mm	40	60 mm	50	62 mm	63	65 mm
Pipe diameter	Insertion length L										
32	55 mm										
40	60 mm										
50	62 mm										
63	65 mm										
	<p>3. Assemble the fitting without sealant! (The o-ring between the steel pipe and fitting saves on packing)</p>										

Should you have questions or need further information, please contact:

Hawle Armaturen GmbH  
- Application Engineering -  
Liegnitzer Str. 6  
83395 Freilassing  
Telephone: +49 8654 6303-0  
Fax: +49 8654 6303-222  
Email: [anwendungstechnik@hawle.de](mailto:anwendungstechnik@hawle.de)  
Website: [www.hawle.de](http://www.hawle.de)